



## Ammonia Transmitter

issue date: 22.Mar.2023, document no: SNH.DS\_v42

### Features

---

- Replaceable 20mm Round Type Electrochemical Cell
- Estimated operating life > 2 years, long term output drift <10% each year
- Zero-Span Calibration & Linear output
- NH3 ranges, standard: 15ppm, 30ppm, 60ppm and 100ppm
- NH3 ranges, extended: 250ppm, 500ppm, 750ppm and 1.000ppm
- NH3 output signal 4-20 mA and 0...10 Vdc
- Operating voltage 24V AC/DC

### Options

---

- Custom design Display
- Modbus / RS485 port
- Relay, 1 or 2 relays, can be set individually
- Buzzer, can be set individually

### Applications


---

- Animal agriculture: cattle, pig and poultry livestock houses,
- Detection of ammonia gas emission in agriculture,
- Leakage control in refrigeration facilities, warehouses etc

## Ordering Codes

model	mounting type	output 1	output 2	options
SNH	W wall	0 no output	0 no output	M modbus
	D duct	1 0...10 Vdc	1 0...10 Vdc	D display
	R room	2 2...10 Vdc	2 2...10 Vdc	R relay 1x
		3 0...5 Vdc	3 0...5 Vdc	RR relay 2x
		4 1...5 Vdc	4 1...5 Vdc	B buzzer
		5 4...20 mA	5 4...20 mA	E 1.000ppm ranges

sample order code: SNH.W51 .MD

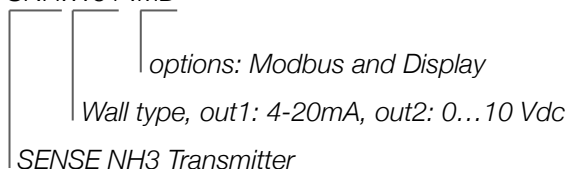

1. Standart NH3 ranges are field selectable as 15ppm, 30ppm, 60ppm and 100ppm
2. Choose "E" for extended ranges 250ppm, 500ppm, 750ppm and 1.000ppm
3. Relay and Buzzer options should have be ordered with Display option
4. For advanced options and special applications, please contact with us [info@senseandcontrol.com](mailto:info@senseandcontrol.com)

## General Notes

1. High density of some other gasses may effect the measurements.
2. Observe maximum permissible cable lengths.
3. If cable runs parallel to the mains cable: Use shielded cables.
4. Test only with certified calibration gasses.
5. The cable entry always should have to be pointing downwards.
6. The data indicated under 'Technical Data' apply only to vertically mounted transmitters.
7. Wall/Room type transmitters should have to be mounted in the center of wall but not near to any doors and windows.













## Cross Sensitivity

1. The values given are only for information and should not be used as a basis for cross calibration.
2. Cross sensitivities may not be linear and should not be scaled either.
3. Datas based on gassing for 5 minutes using test equipment.

Test Gas	Test Gas Concentration	NH3 Equivalent
Carbon Monoxide	500 ppm	0 ppm
Hydrogen Sulfide	25 ppm	30 ppm
Sulphur Dioxide	20 ppm	-6 ppm
Hydrogen	100 ppm	0 ppm
Nitric Oxide	50 ppm	0 ppm
Carbon Dioxide	5000 ppm	0 ppm
Nitrogen Dioxide	5 ppm	-7.5 ppm
Ethanol	100 ppm	0 ppm


## DIP Switch Settings

1. Please check if there is any special instruction on the enclosure or inside the cover
2. For any calibration, please choose 1 sec. response time for faster measurements

DIP	Standard Ranges	DIP	Extended Ranges	DIP	Response
	15 ppm		250 ppm		1 sec
	30 ppm		500 ppm		5 sec
	60 ppm		750 ppm		30 sec
	100 ppm		1.000 ppm		60 sec

## Electrical Connections

1. Please be sure about current direction for current outputs and polarity for voltage outputs.
2. Relay contact is Normally Open and rating is max. 1A at 230VAC
3. We kindly advise using 24V for avoiding high voltage harmonics and external power relay for bigger loads
4. Please use shielded and twisted paired cables for Modbus connections
5. Please observe RS485 termination rules, max. 32 devices in a single Modbus line


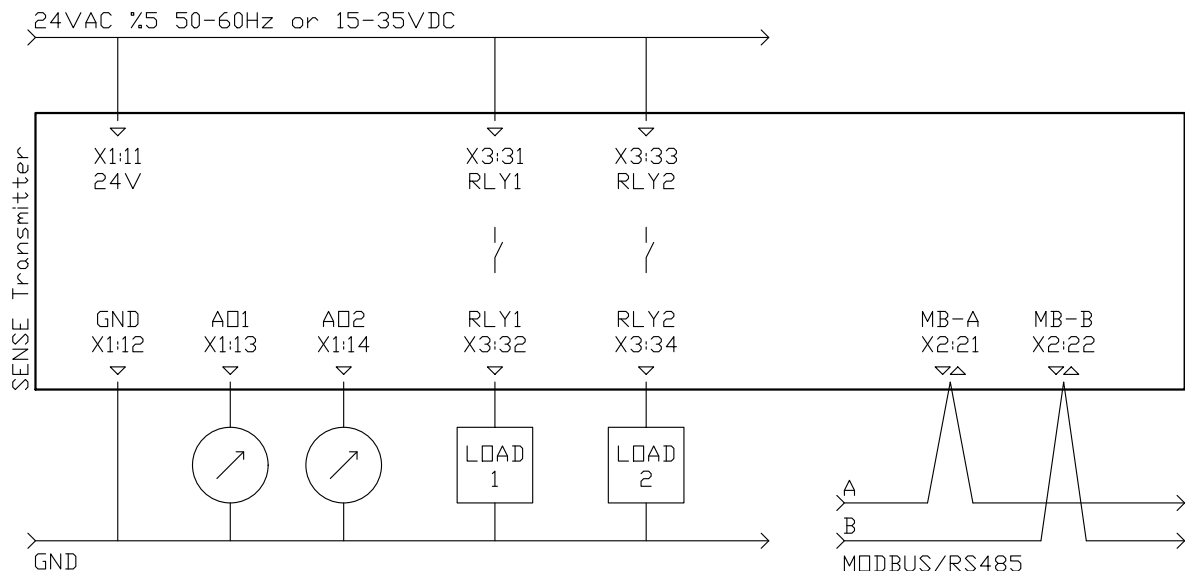


## Technical Data

---

<b>Electrical</b>	Power Supply	AC 24V ( $\pm$ %5), 50-60 Hz DC 15...35 V
	Power Consumption	< 2.5 W
<b>Outputs</b>	Current Output	4...20 mA, maximum 500 $\Omega$
	Voltage Output	0...10 Vdc, minimum 1.000 $\Omega$ 0...5 Vdc, minimum 1.000 $\Omega$
	Relay Output	max. rating 1A @ 220 Vac
<b>Accuracy</b>	NH3	$\pm$ 3 %
<b>Sensor</b>	t90	< 50 sec.
	life time	> 2 years expected
	drift	< 10% per year
	resolution	1 ppm
	repeatability	< $\pm$ 5 %
	baseline	< 1 ppm
	Operating Temperature	-20 ...+50°C
Operating Humidity	15...90 %rH	
Operating Pressure	800...1.200 mbar	
<b>General Data</b>	Sensing Element	Electrochemical Cell
	Media	Air or non-aggressive gasses
	Storage Temperature	0 ...+20°C recommended
<b>Ranges</b>	NH3	0...15-30-60-100 ppm ranges for standard types 0...250-500-750-1.000 ppm ranges for extended types
<b>Connections</b>	X1-X2 Terminals	Pluggable screw terminal
	X3 Terminals	Fixed screw terminal
	Cable	maximum 1.5mm <sup>2</sup>
	Cable Gland	M16
<b>Protection</b>	SNH.W series	IP65
	SNH.D series	IP65
<b>Standards</b>	EMC Directive	EN 61326-1
<b>Dimensions</b>	SNH.W series	98.0 x 81.5 x 45.5 mm
	SNH.D series	98.0 x 81.5 x 45.5 mm, probe diameter 30 mm, length 120mm
<b>Weight Packed</b>	SNH.W series	229 gr

# Transmitter Hardware

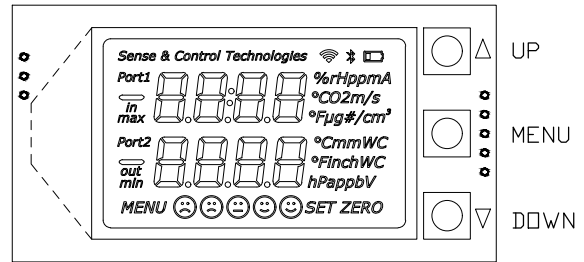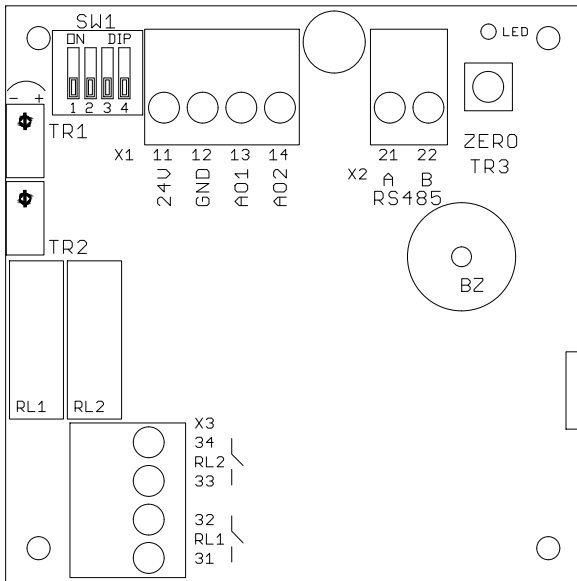

**SW1** DIP Switch for configuration range and response time

## X1 TERMINAL

<b>11</b>	24V	15...35 Vdc or 24 Vac (± %5, 50-60 Hz)
<b>12</b>	GND	ground for power and reference for outputs
<b>13</b>	AO1	analog output 1
<b>14</b>	AO2	analog output 2

## X2 TERMINAL

<b>21</b>	A / RS485	modbus communication positive pair
<b>22</b>	B / RS485	modbus communication negative pair

**LED** bead LED, periodically lights ON and OFF  
modbus communication, blinks when there is a communication

**TR1** not used

**TR2** not used

**ZERO / TR3** not used


**RL1 & RL2** relay 1 and relay 2

**BZ** buzzer

## X3 TERMINAL

<b>31</b>	NO - RL1	relay 1 dry contact max. rating 1A @ 220 Vac
<b>32</b>	NO - RL1	relay 1 dry contact max. rating 1A @ 220 Vac
<b>33</b>	NO - RL2	relay 2 dry contact max. rating 1A @ 220 Vac
<b>34</b>	NO - RL2	relay 2 dry contact max. rating 1A @ 220 Vac

# Display & Buttons

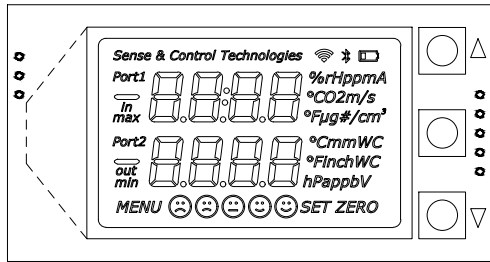

Sense & Control Technologies

Port1 In max 22.22.22 %rHppmA °CO2m/s °Fµg#/cm³


Port2 out min 22.22.22 °CmmWC °FinchWC hPappbV

MENU 😞 😞 😞 😞 😞 SET ZERO

UP *press for increasing the value or choosing the next parameter*

MENU *press and wait to enter MENU, click to navigate between sub menus one by one*

DOWN *press for decreasing the value or choosing the previous parameter*

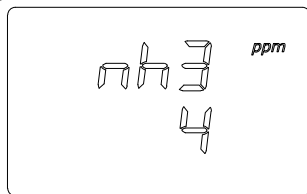


main screen  
transmitter is working




keep pressing MENU button until seeing SET  
transmitter is not working in MENU mode

## Parameters for Relay & Buzzer


Main Screen >> r1 L >> r1 H >> r1 A >> r2 L >> r2 H >> r2 A >> B L >> B H >> B A >> Main Screen

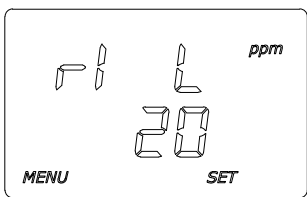


LOW set point for Relay 1

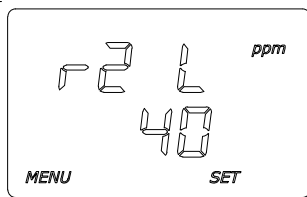


LOW set point for Relay 2

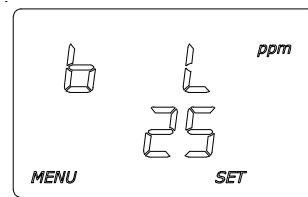


LOW set point for Buzzer

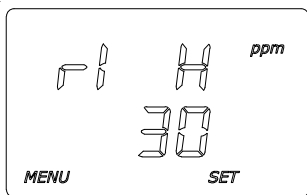


HIGH set point for Relay 1

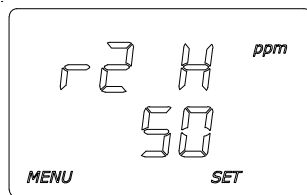


HIGH set point for Relay 2

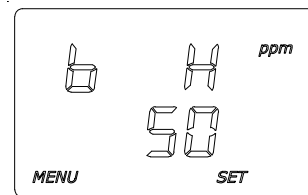


HIGH set point for Buzzer

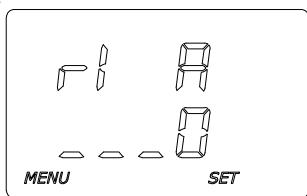

ACTION selection for Relay 1

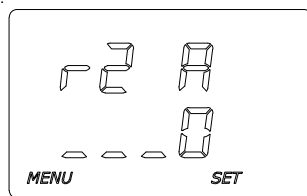

ACTION selection for Relay 2

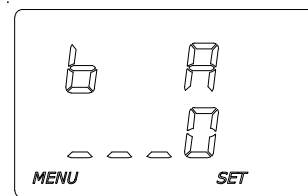


ACTION selection for Buzzer

## Actions for Relay & Buzzer




action 0, valid for relays and buzzer,  
relay contact is always OPEN  
buzzer is always SILENCE




action 1, valid for relays and buzzer,  
relay contact is CLOSED between points, OPEN under LOWpoint and OPEN over HIGHpoint  
buzzer is WARNING between points, SILENCE under LOWpoint and SILENCE over HIGHpoint



action 2, valid for relays and buzzer,  
relay contact is OPEN between points, CLOSED under LOWpoint and OPEN over HIGHpoint  
buzzer is SILENCE between points, WARNING under LOWpoint and SILENCE over HIGHpoint



action 3, valid for relays and buzzer,  
relay contact is CLOSED over HIGHpoint, OPEN under LOWpoint, hysteresis between points  
buzzer is WARNING over HIGHpoint, SILENCE under LOWpoint, hysteresis between points



action 4, valid for relays and buzzer,  
relay contact is OPEN over HIGHpoint, CLOSED under LOWpoint, hysteresis between points  
buzzer is SILENCE over HIGHpoint, WARNING under LOWpoint, hysteresis between points



action 5, valid only for buzzer,  
buzzer is WARNING over HIGHpoint, SILENCE under LOWpoint,  
buzzer is WARNING intermittently between points,



action 6, valid only for buzzer,  
buzzer is WARNING under LOWpoint, SILENCE over HIGHpoint,  
buzzer is WARNING intermittently between points,



action 7, valid only for buzzer,  
buzzer is following relay 1 contact,  
buzzer is WARNING when relay 1 contact is CLOSED, SILENCE when the contact is OPEN



action 8, valid only for buzzer,  
buzzer is following relay 2 contact,  
buzzer is WARNING when relay 2 contact is CLOSED, SILENCE when the contact is OPEN

ACTIONS	under LOW	between LOW & HIGH	over HIGH
0 : 0.0.0	Open / Silence	Open / Silence	Open / Silence
1 : 0.1.0	Open / Silence	Closed / Warning	Open / Silence
2 : 1.0.1	Closed / Warning	Open / Silence	Closed / Warning
3 : 0.X.1	Open / Silence	Hysteresis	Closed / Warning
4 : 1.X.0	Closed / Warning	Hysteresis	Open / Silence
5 : 0.-.1	Silence	Pre Alarm	Warning
6 : 1.-.0	Warning	Pre Alarm	Silence
7 : =r1	Silence when RL1 is Open, Warning when RL1 is Closed		
8 : = r2	Silence when RL2 is Open, Warning when RL2 is Closed		

0 : Relay Contact is OPEN, Buzzer is in Silent mode

1 : Relay Contact is CLOSED, Buzzer is in Warning mode

X : Relay Contact is at HYSTERESIS position, OPEN if previous position open, CLOSED if previous position closed

- : Buzzer is in HYSTERESIS mode, Silent if previous mode is silent, Warning if previous mode is warning

- : Buzzer is in PRE ALARM mode, Buzzer is warning intermittently

## Modbus RS485 Protocol

---


Default Settings: Modbus ID:1, 9600, 8bit, None, 1. Register Table starts from Base 1.

Use Function 3 for Reading and Function 6 for Writing Holding Registers. Whenever writing to any Modbus Parameter, new parameter is activated instantly and you should have to configure master device according to new parameters. For every reboot/initializing, Modbus is activated with default parameters for 3 seconds. After 3 seconds, Modbus is reconfigured according your parameter settings.

Unlisted registers are for analog output calibrations and some system parameters. Please do not change unlisted registers. Modbus ID:254 is common address for all units.

Register	R/W	Range	Description
1	R & W	1...254	Modbus Address
2	R & W	0...1	Baudrate, 0: 9.600, 1: 19.200
3	R & W	0...3	Bit_Parity_Stop, 0: 8bit_None_1, 1: 8bit_None_2, 2: 8bit_Even_1, 3: 8bit_Odd_1
4	R	0...1000	NH3 level as ppm x10, divide by 10 for exact value
5	R	0...10000	NH3 level as ppm x100, divide by 100 for exact value
6	R	0 or 1	Relay 1, contact position, 0: OFF - Contact is Open, 1: ON - Contact is Closed
7	R	0...1.000	Relay 1, LOW point
8	R	0...1.000	Relay 1, HIGH point
9	R	0...4	Relay 1, ACTION
10	R	0 or 1	Relay 2, contact position, 0: OFF - Contact is Open, 1: ON - Contact is Closed
11	R	0...1.000	Relay 2, LOW point
12	R	0...1.000	Relay 2, HIGH point
13	R	0...4	Relay 2, ACTION
14	R	0 or 1	Buzzer, 0: OK-Silence, 1: PreAlarm - warning intermittently, 2: WARNING continuously
15	R	0...1.000	Buzzer, LOW point
16	R	0...1.000	Buzzer, HIGH point
17	R	0...8	Buzzer, ACTION

## Calibration - General Information

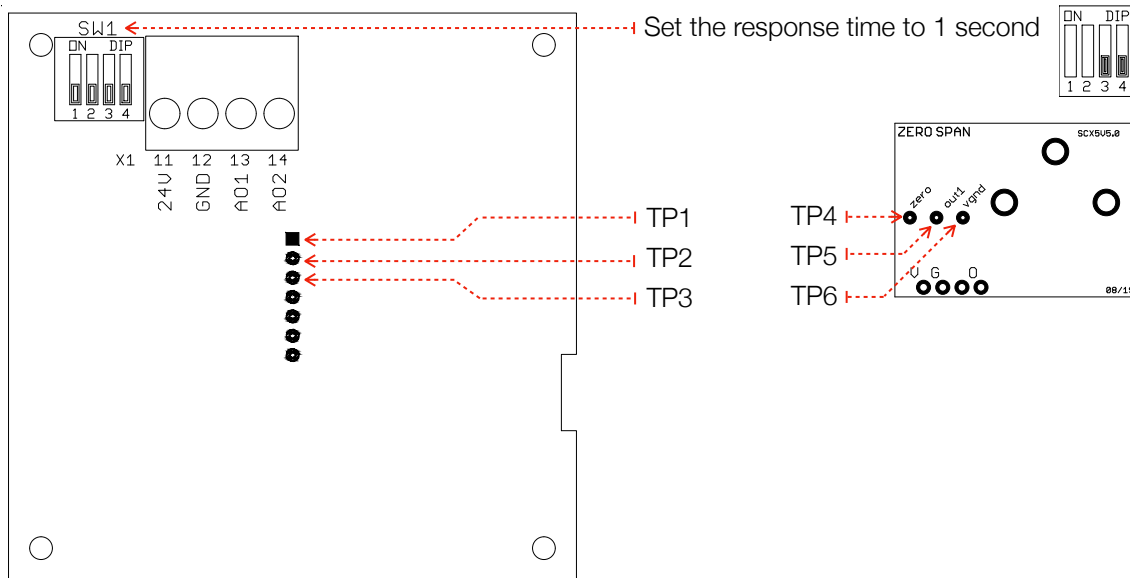

Before the process;

1. Please keep the unit working for minimum 10 minutes at fresh air for settling the baseline.
2. Please use certified calibration NH<sub>3</sub> Test Gasses.
3. Please use a precision multimeter,
  - ⊖ is showing Negative/Reference Point,
  - ⊕ is showing Positive Measurement Point.
4. Set the best range according to calibration gas.
5. Single point calibration is enough for any range.
6. Calibration steps: Check the typical values, Set ZERO, Set SPAN.

## Check Typical Values

1. TP2⊖ vs TP1⊕ is about 5 VDC
2. TP2⊖ vs TP6⊕ is about 455 mV DC
3. TP6⊖ vs TP5⊕ is lower than 5 mV DC

## ZERO Calibration

1. Use ZERO Trimmer for setting below values,
2. TP2⊖ vs TP4⊕ should be closest to 455 mV DC,
3. TP5⊖ vs TP4⊕ should be closest to 0 VDC,
4. a. Read the data at Modbus-HR19,  
b. Write the data to Modbus-HR18,  
c. Write 9 to Modbus-HR27.

## SPAN Calibration

1. Use SPAN Trimmer for calibration.
2. Before applying the Test Gas, measure output as AO1⊕ vs GND⊖, should be very close to 0ppm.
3. Apply the test gas for min. 1 minute with 0.5 lt/min. flow rate,
4. Start calibration with SPAN trimmer,
5. Analog output should show the test gas concentration value (AO1⊕ vs GND⊖).
6. Applying test gas for 3 minutes is enough for a standard calibration.
7. For best calibration, you can apply the test gas for 5 minutes.
8. Applying the test gas for longer and for many times, reduces the NH<sub>3</sub> Sensing Element life.

# Drawings

